

Linear Architectural Light

T-bar Mount




(7) M4*10 Screws



(8) M5*8 Screws




(2) Bracket

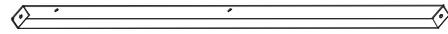


(1) Frame

1-1

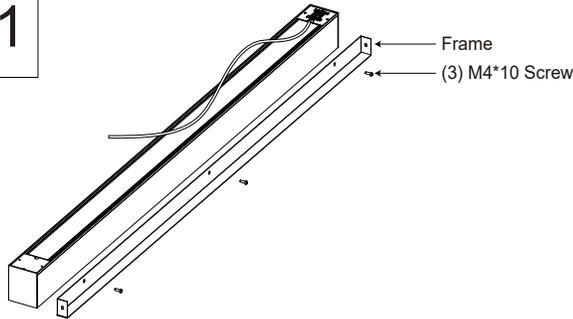


Fix the frame to one side of fixture with M4*10 Screws.

1-2

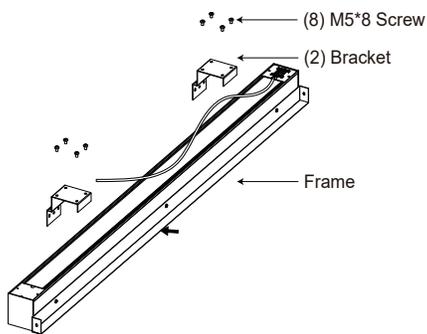


Fix the two brackets to the top of fixture with M5*8 screws (suggested mounting distance between brackets is 60-80mm).

1-3

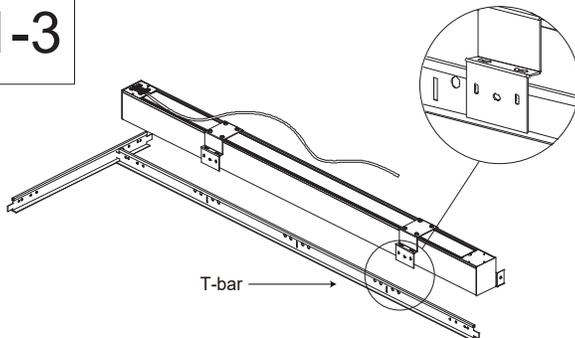

Put the fixture on the T-bar, please note that the bracket should be put on the outside of T-bar.

1-4

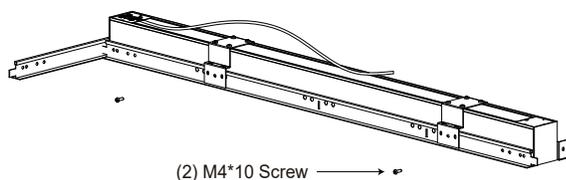


Fix the fixture to T-bar with M4*10 screw.

Linear Architectural Light


T-bar Mount

1-5

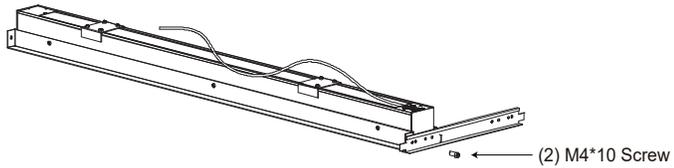


According to installation requirements, you can fix the frame to T-bar at both ends with M4*10 screws.

1-6

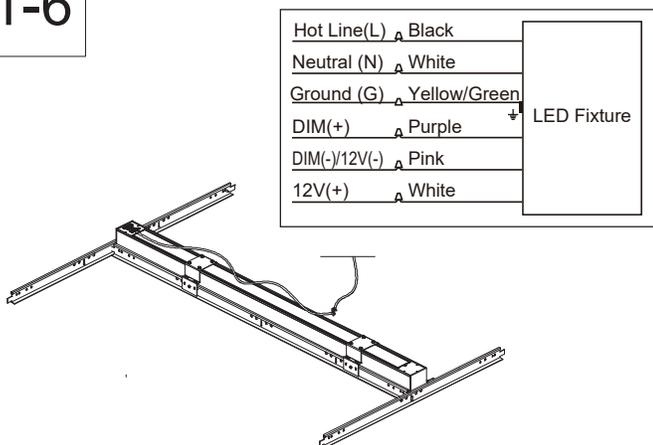

Connect wires according to the wiring diagram.

1-7

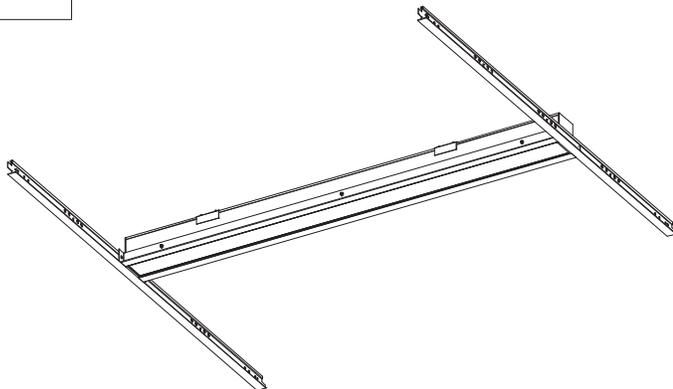

Finish.

Linear Architectural Light

Ceiling Mount

30SW&60SW



(2) Mounting Plate



(2) Mounting Clip



(8) M5*10 Screw



(2) Flat Washer



(2) M4*30 Screw
(2) Plastic Expansion Tube

100SW



(6) Mounting Plate



(6) Mounting Clip



(24) M5*10 Screw




(6) Flat Washer




(6) M4*30 Screw
(6) Plastic Expansion Tube

1-1

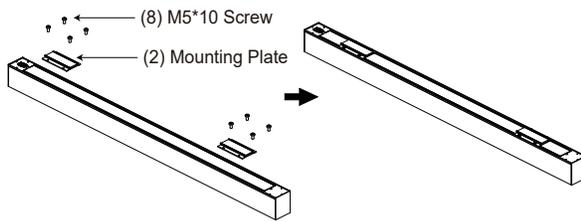


Mount the (2) mounting plates to the back side of the fixture with (8) M5*10 screws.

1-2

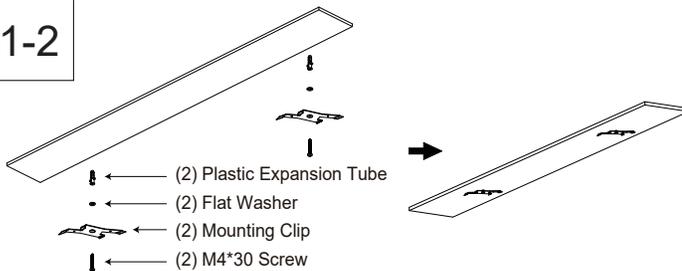


Fix the (2) mounting clips to the ceiling with (2) plastic expansion tubes, (2) flat washers and (2) M4*30 screws.

1-3

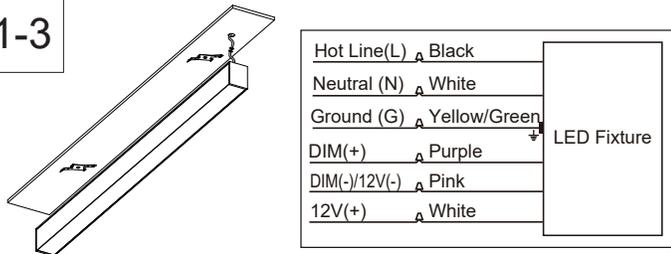


Connect wires according to the wiring diagram. (If the wire is too long, you can cut it short according to your requirement)

1-4

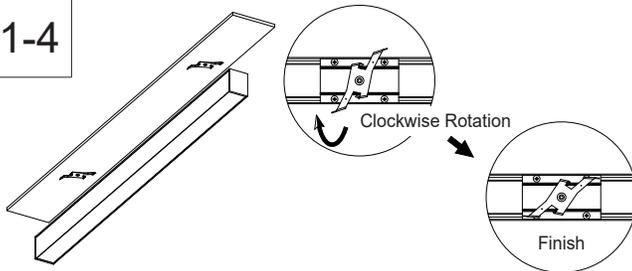

Align the mounting plates with the clips, and then rotate clockwise to fix it as shown in the picture.

1-5

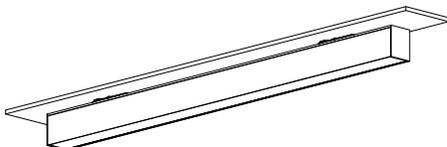

Finish.

Linear Architectural Light


Recessed Mount



(8) M4*12 Screw



(2) End Cover

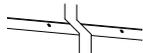

(2) Recessed Frame



(6) M4*30 Screw




(2) Recessed Bracket Group




(8) M5*10 Screw

1-1

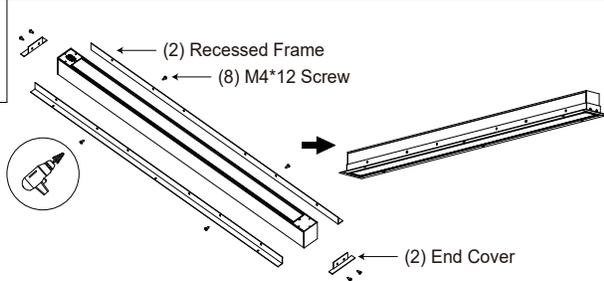


Fixed (2) recessed frames and (2) end covers to the fixture with (8) M4*12 screws.

1-2

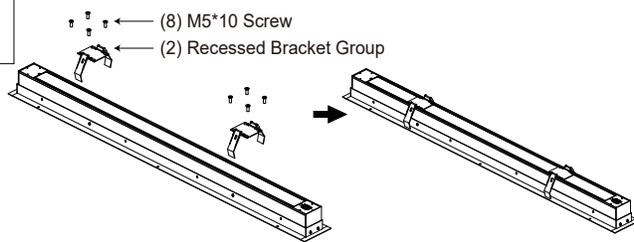

Mount the (2) recessed bracket groups to the back plate of the fixture with (8) M5*10 screws.


1-3

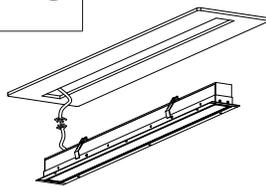

Hot Line(L)	Black	LED Fixture
Neutral (N)	White	
Ground (G)	Yellow/Green	
DIM(+)	Purple	
DIM(-)/12V(-)	Pink	
12V(+)	White	


Connect wires according to the wiring diagram.
(If the wire is too long, you can cut it short according to your requirement)

1-4

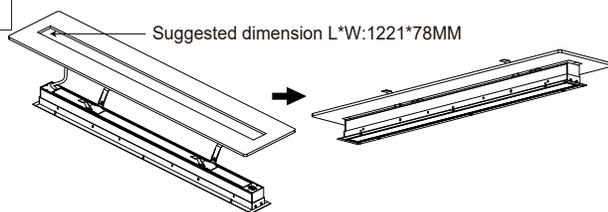

Bend the spring assemblies up on both sides and insert the fixture upwards into the ceiling

1-5

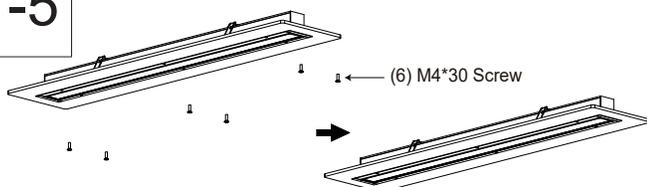

Fix the recessed frame to the ceiling with (6) M4*30 screws. Make sure that the fixture and the ceiling surface are smooth.
Finish.

Linear Architectural Light

Wall Mount

30SW&60SW



(6) M4*30 Screw



(2) M4*6 Screw



(2) Wall Mount Bracket

100SW



(18) M4*30 Screw




(6) M4*6 Screw




(6) Wall Mount Bracket

1-1

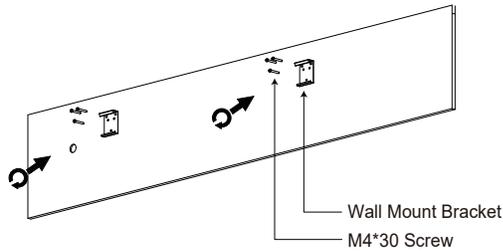


Mount brackets to the wall with M4*30 screws.

1-2

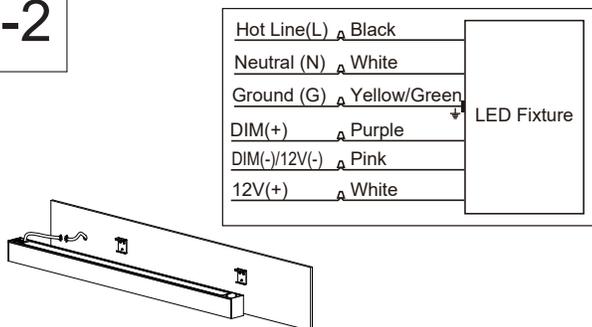


If the wires are too long, you can shorten it according to your requirements. Then connect wires according to the wiring diagram.

1-3

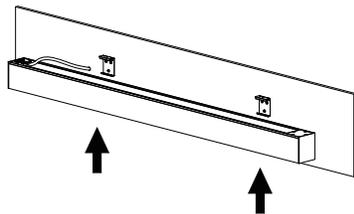

Align the fixture with the bracket, and then clamp the fixture onto the bracket. Check and ensure that the fixtures and brackets are securely fastened

1-4

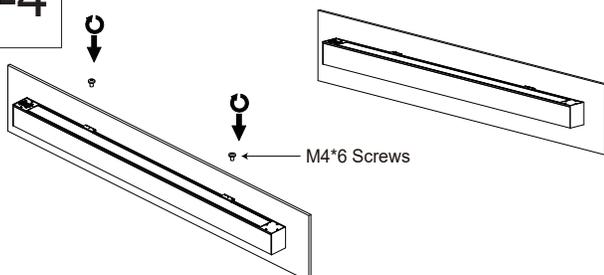

Lock the M4*6 screw to the top of the bracket. Finish.